


# Drive-through scale 2825

Stainless steel, hinged platform, approvable, for elevated hygiene requirements

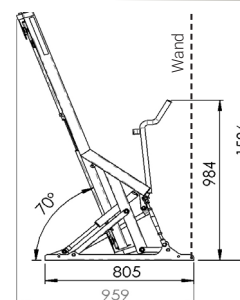

## Features

- ▶ Approvable, class III
- ▶ Weighing platform made from 1.4301 stainless steel, hinged platform
- ▶ Load cells made from stainless steel
- ▶ Protection class IP 68 with potted terminal box (see accessories)
- ▶ Terminal box made from stainless steel
- ▶ Easy to clean design, hygienic design
- ▶ Gas compression springs made from 1.4301 stainless steel
- ▶ Load acceptance iaw. DIN 8119-4, control load 3
- ▶ The special pivot point design allows the scale to be positioned directly on a wall with the rear side facing.
- ▶ To drive-on or drive-over
- ▶ Drive-on ramps for easy drive-on with load, length: 489 mm (see accessories)
- ▶ Measurement cable length: 6 m (other cable lengths on request)
- ▶ Optionally with plug-in connection to the terminal
- ▶ Can be combined with all approvable Soehnle Professional terminals

Order No.	Configuration	Platform size mm	Dimensions mm	Maximum load kg	Division g	Load capacity kg
<b>Approvable</b>						
2825.01.001	Stainless steel	1.250 x 1.500	1.865 x 1.625 x 40	600   <b>1.500</b>	200   500	2.000
5711.02.001	Transport lock / mounting frame, painted yellow (for purchase / in exchange*)					

\* Reimbursement of the price on return of the transport security.

## Accessories

Order No.	Configuration
2505.04.001	Drive-on ramp, in front smooth 1.250 x 500 x 40 mm
2505.04.002	Drive-on ramp, at the back, smooth 1.250 x 500 x 40 mm
2538.01.001	Height adjustment set, stainless steel (consisting of 4 x 1 mm, 2 x 3 mm, 2 x 5 mm)
2538.01.002	Drive-through stop, stainless steel, length = 1,340 mm
2516.01.002	Terminal box in protection class IP 68, potted